



Accessing Waste Hauler Site Control Valve

Purpose & Scope

The purpose of this document is to assist the domestic waste haulers when opening the control valve for the waste hauler station at the Kuwahee wastewater treatment plant.

Responsibility

Domestic waste haulers are assigned a unique Security Access Number (SAN) for each truck that is permitted. These SANs are nontransferable and may not be shared with other permitted trucks within the waste hauler fleet. The SANs and the permit numbers must be kept within the vehicle that they are always assigned.

Instructions

1. Enter 3-digit ID # then press ENTER
2. Enter 4-digit PIN # then press ENTER
3. "Hose connected, ready to discharge?" will be displayed. If you are ready press START.
4. Valve will automatically close after 40 minutes.
5. Call the control room (865-594-7622) at any time for help.

